

SECTION 7. CARTRIDGES

Contents

Introduction	7-3
How to Handle Cartridges	7-5
How to Insert and Remove Cartridges	7-6
To Insert a Cartridge	7-6
To Remove a Cartridge	7-7


Notes:

Introduction


Now that your IBM PC_{jr} is set up and operating correctly, you are ready to load a program. Some programs are recorded on cartridges. This section explains how to handle, insert, and remove cartridges.

Notes:

How to Handle Cartridges

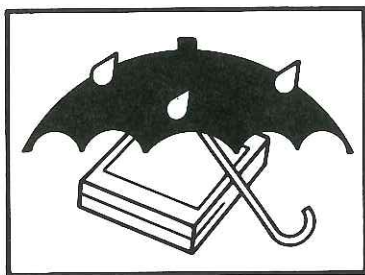


Keep Them Dry

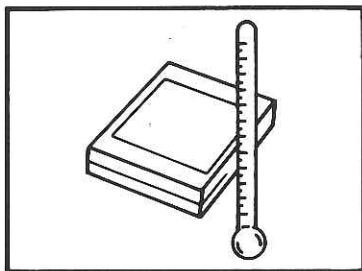

**Don't Place Them in the
Sun or Near Intense Heat**


How to Insert and Remove Cartridges

The cartridge slots on your IBM PCjr are shown below.

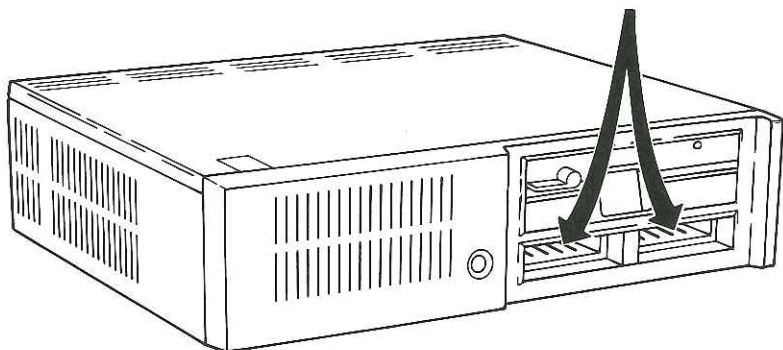

To Insert a Cartridge

- 1** Hold your cartridge with the label side up so you can read it.
- 2** Firmly slide the cartridge into either slot until it snaps in place. If it doesn't snap in place make sure you have the label side up.

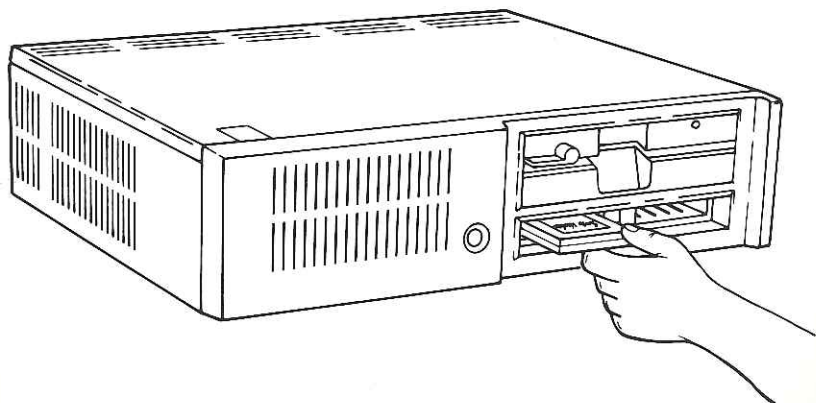

To Remove a Cartridge

Slide the cartridge out of the slot.

You may insert or remove a cartridge at any time. When you insert or remove a cartridge, your IBM PC_{jr} automatically does a **System Reset**. (It behaves as if you just turned your IBM PC_{jr} power on.)

Notes: