
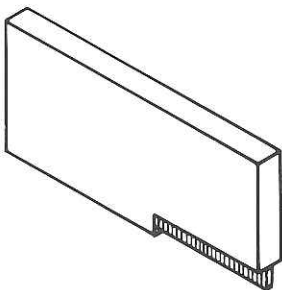


# IBM PCjr 64KB Memory and Display Expansion Installation Instructions

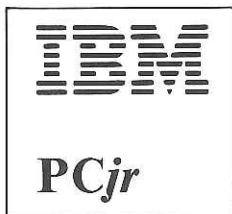

If your IBM PCjr has not been set up at this time, do so before installing this option.

If you have a diskette drive option to install, do so before installing this option.

This carton contains the following:

- IBM PCjr 64KB Memory and Display Expansion Option

If this item is missing or damaged, notify your place of purchase.



# Contents

Installation Requirements .....	2
Tools Required .....	2
Installation Instructions .....	3

# Installation Requirements

**Your IBM PCjr must be set up before you can install this option.**

## Tools Required


- Medium-size, flat-blade screwdriver

# Installation Instructions

- 1 Turn your IBM PCjr power off.
- 2 Turn all external option power off (printer, TV, cassette, etc.).
- 3 Unplug the power cords for the IBM PCjr and all options from the wall outlets.
- 4 Turn your IBM PCjr so the rear is toward you.



## CAUTION

Serious shock hazards exist within the covers of the IBM PCjr. Do not open these covers unless you have unplugged your IBM PCjr power cord from the wall outlet.

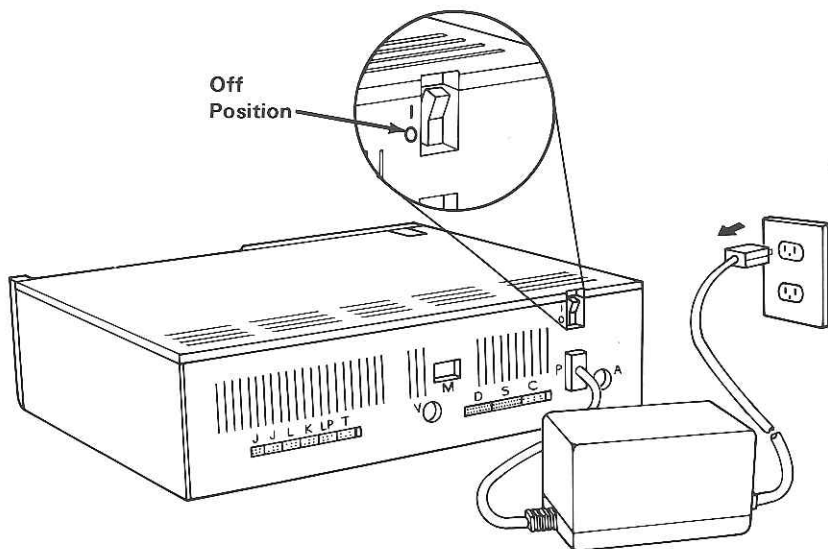


**Warning:** After turning your IBM PCjr power off, allow 5 minutes for cooling to take place before removing the cover.

- 5** Place a flat-blade screwdriver into the slots and twist.
- 6** Remove the top cover by lifting it up and away from the front of the IBM PCjr.

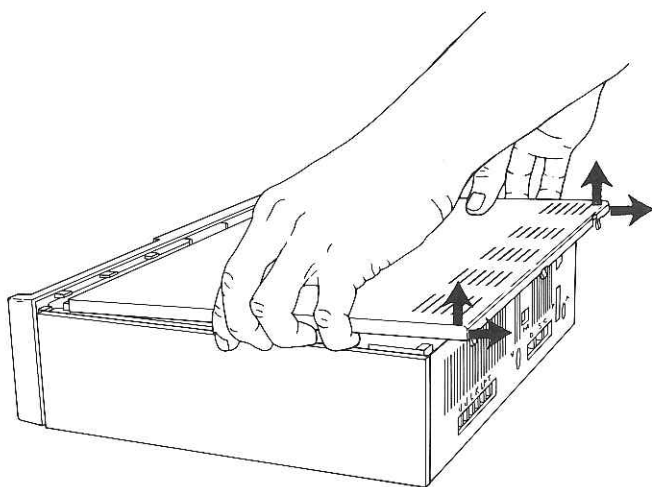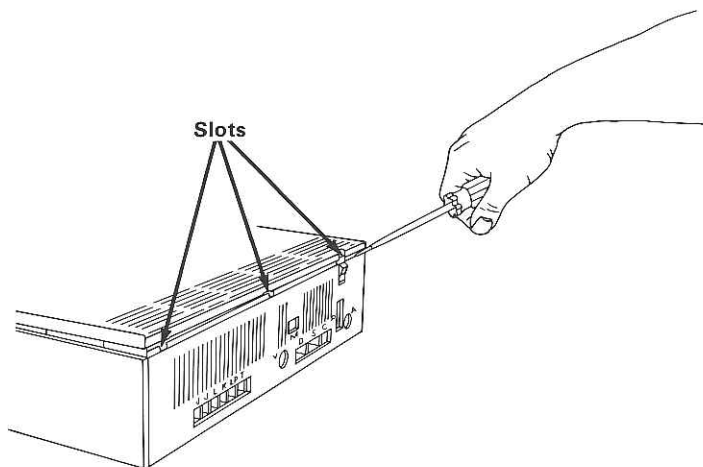


**7** Turn your IBM PCjr so the front is toward you.

**8** Position the 64KB Memory and Display Expansion Option so that its system connector is directly above its system slot. Press it firmly in place.

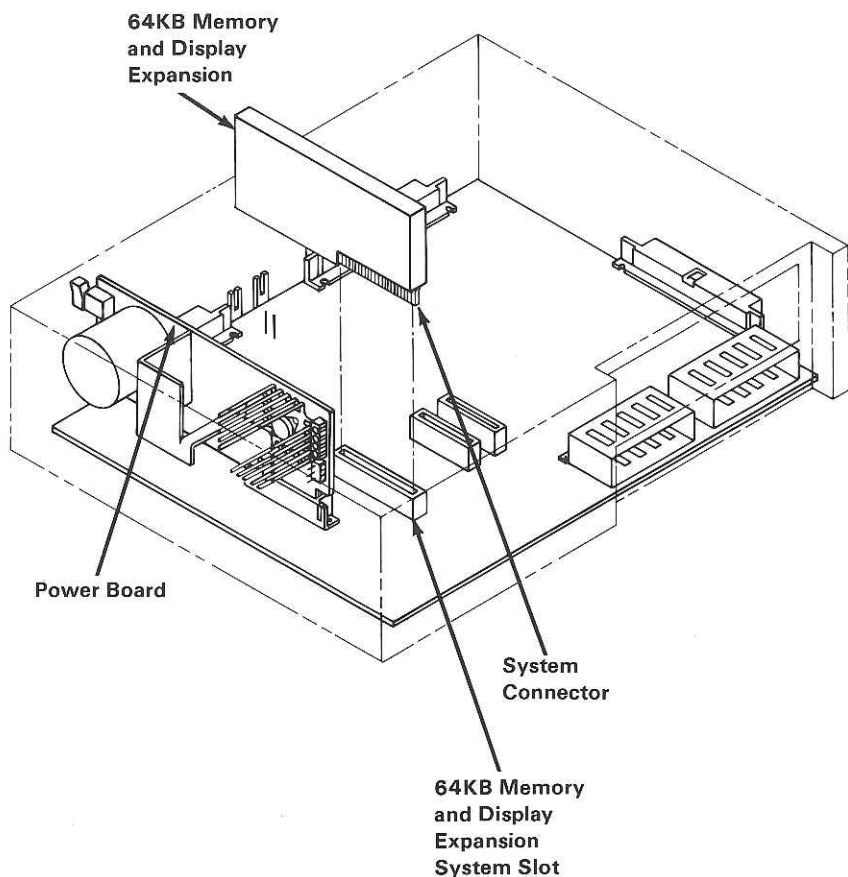

9

Replace the top cover by placing it on the IBM PCjr. Slide it forward until the top cover and front of the IBM PCjr fit together. Press down on the rear of the top cover until it snaps into place.

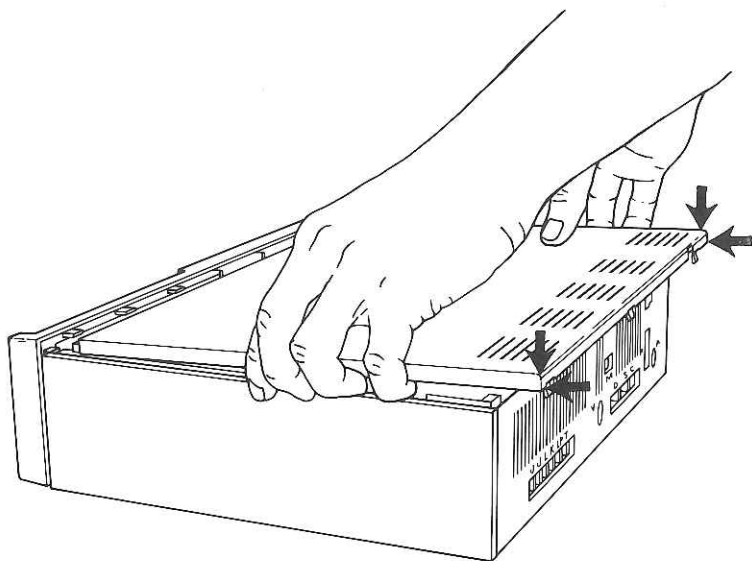



- 10** Plug the IBM PCjr and all option power cords into wall outlets.

**Important:**

Insert these option instructions into Section 5 of the *Guide to Operations* manual.

- 11** If you have any other options to install, install them at this time.

If you do not have any other options to install, continue normal operation.

**Notes:**

**Notes:**

**Notes:**