
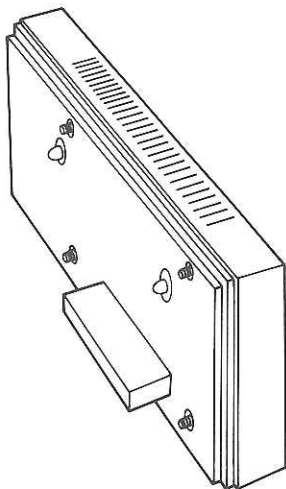


# IBM PCjr Parallel Printer Attachment Installation Instructions

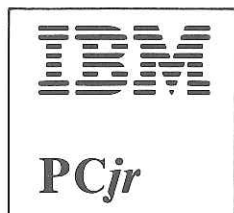

Printer

**If your IBM PCjr has not been set up at this time, do so before installing this option.**

**This carton contains the following:**

- **Parallel Printer Attachment**

**If this item is missing or damaged, notify your place of purchase.**

# Contents

Installation Requirements .....	2
Tools Required .....	2
Installation Instructions .....	3

# Installation Requirements


Your IBM PCjr must be set up before you can install this option.

## Tools Required

- Medium-size flat blade screwdriver.


# Installation Instructions

- 1 Turn your IBM PCjr power off.
- 2 Turn all external option power off (printer, TV, etc).
- 3 Unplug the power cords for your IBM PCjr and all options from wall outlets.

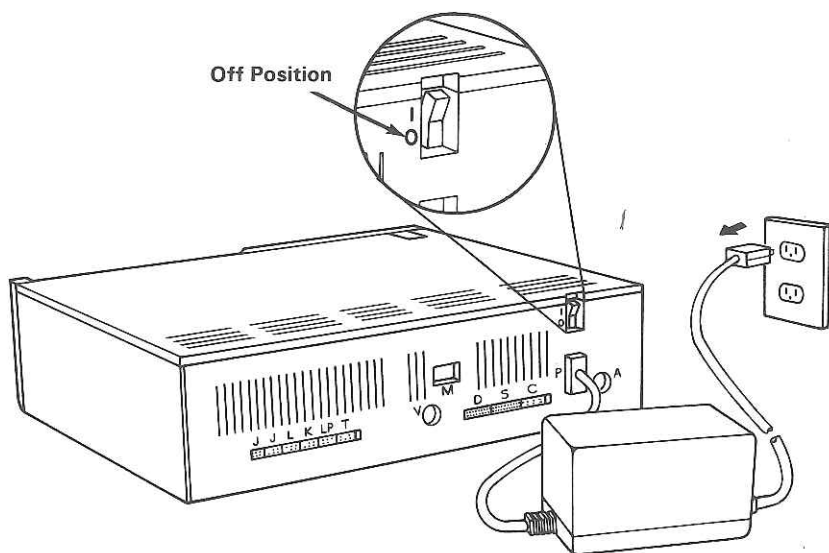


- 4** Turn your IBM PCjr so the right side is toward you. Remove the option attachment cover.

**Note:** It may be necessary to gently pry the cover off by inserting a screwdriver between the option attachment cover and the side of your IBM PCjr.

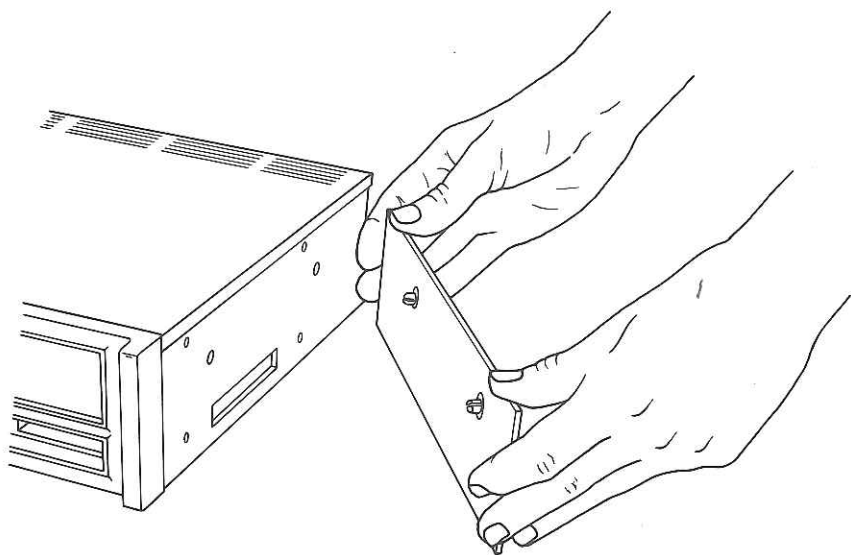


- 5 Position the IBM PCjr Parallel Printer Attachment so the mounting holes and attachment slot line up with the mounting pins and attachment connector. Then press the IBM PCjr Parallel Printer Attachment into place.
- 6 Tighten the four mounting screws until they are snug.

**Note:** Use a medium-size flat blade screwdriver.

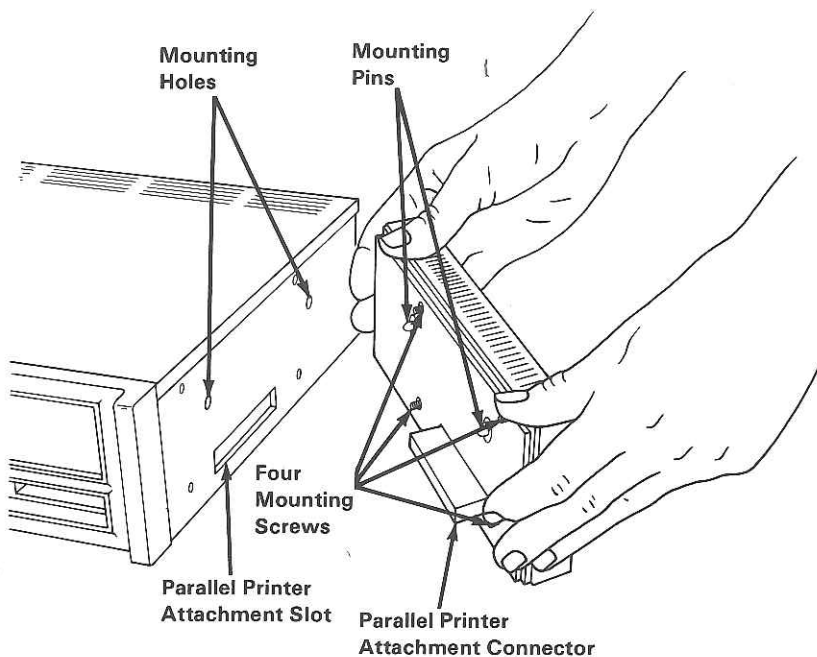

**7**

Install the option attachment cover. Make sure it is pressed firmly into the mounting holes.

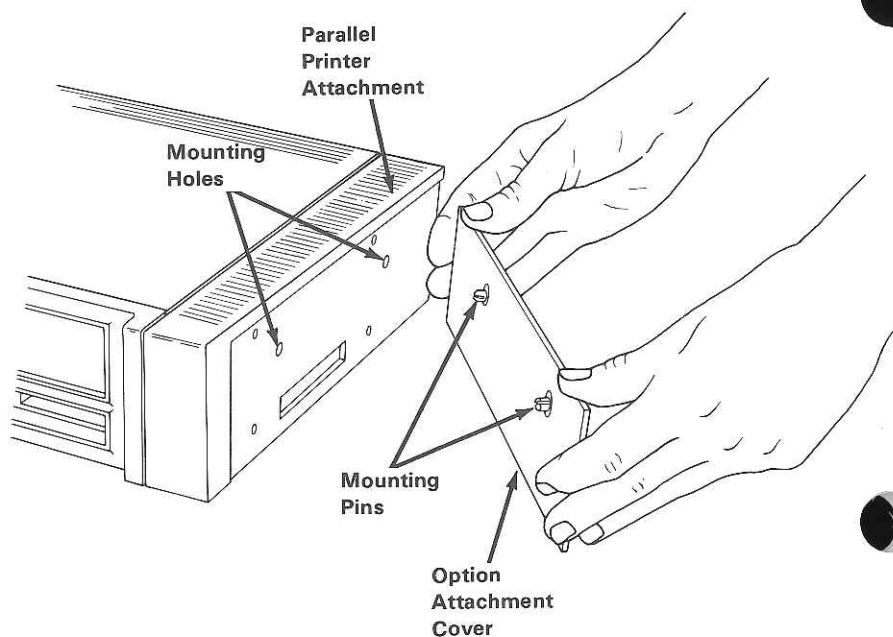

- 8** Plug the IBM PC<sub>jr</sub> and all option power cords into wall outlets.

**Important:**

Insert these option instructions into Section 5 of the *Guide to Operations* manual.

- 9** When you have completed installation of the Parallel Printer Attachment, continue with the installation of the IBM Graphics Printer.



**Notes:**

**Notes:**