

SECTION 1. SETTING UP YOUR IBM PC^{jr}

Contents

Installation	1-5
--------------------	-----

Notes:


IMPORTANT: DO THIS FIRST

Setup Instructions For Your IBM PCjr




**Here's how to get your IBM PCjr
ready to run.**


Just follow these steps!

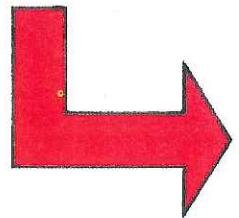


- 1** Remove the system unit, the keyboard, the power cord, the two manuals, and these instructions from the carton.

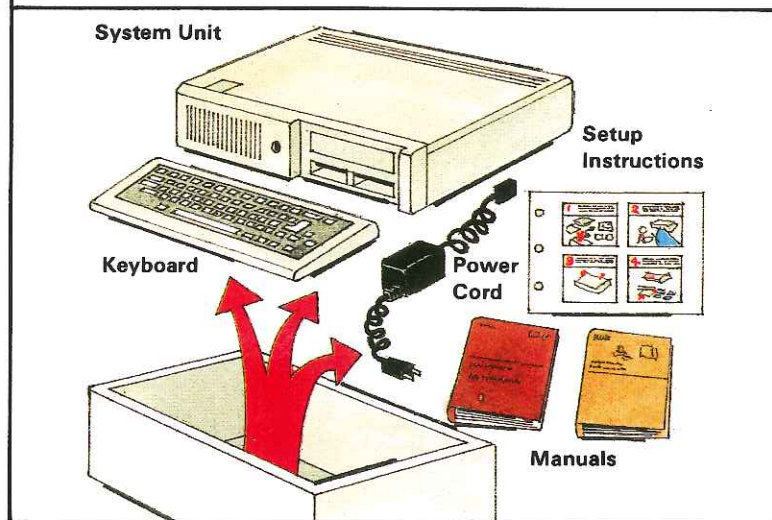


- 2** Turn the system unit over and record the serial number on this sheet.

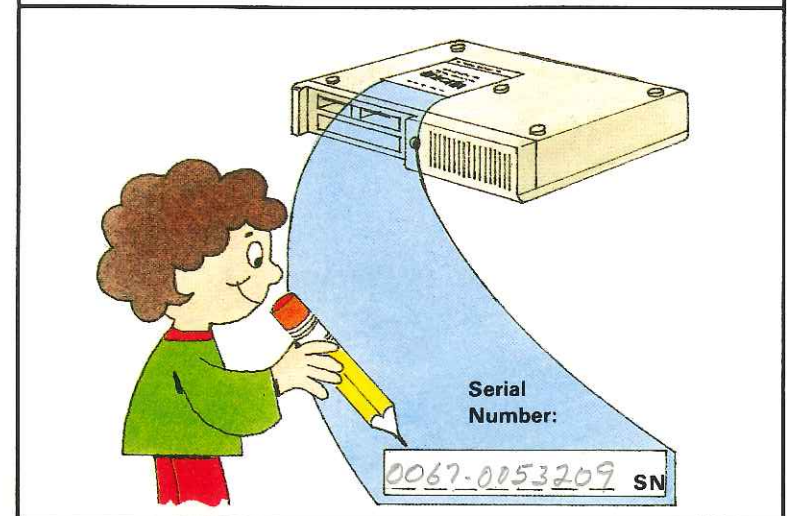

- 3** Turn the keyboard over and raise the legs to the upright position.

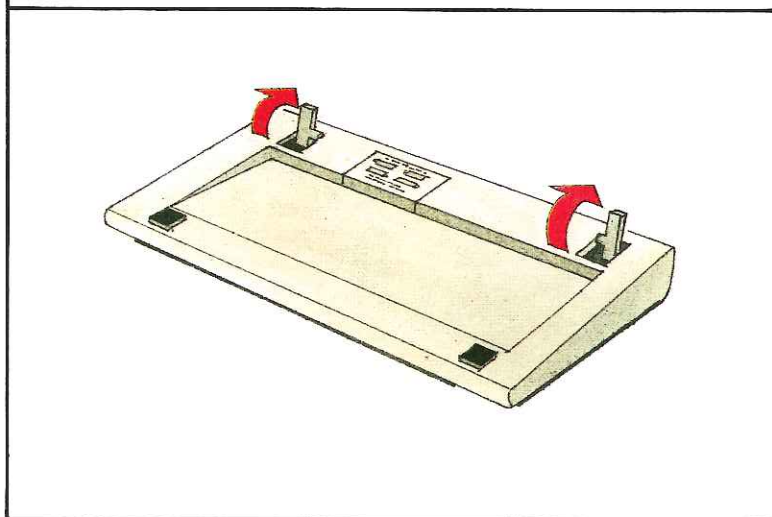


- 4**
- A. Slide the cover of the battery compartment open.
 - B. Insert the four AA batteries as directed.
 - C. Close the battery compartment.

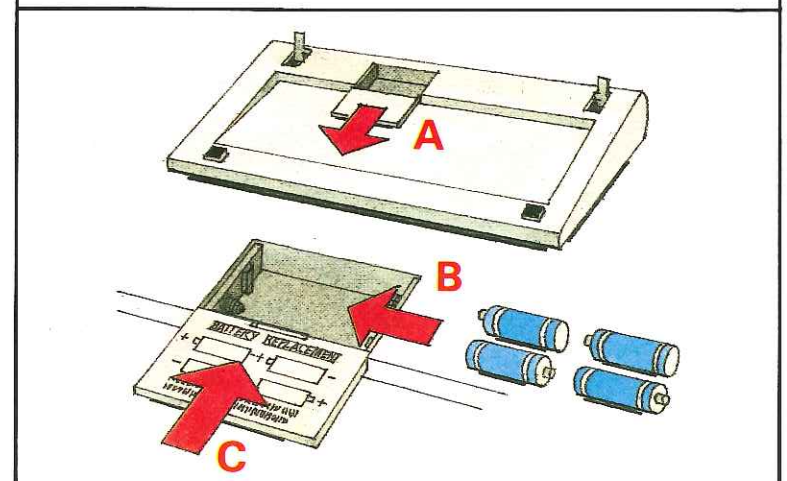


5

Return your keyboard and system unit to the upright position. Place the keyboard directly in line with the front of the system unit. If your system has a diskette drive, turn the handle on the diskette slot and remove the cardboard.

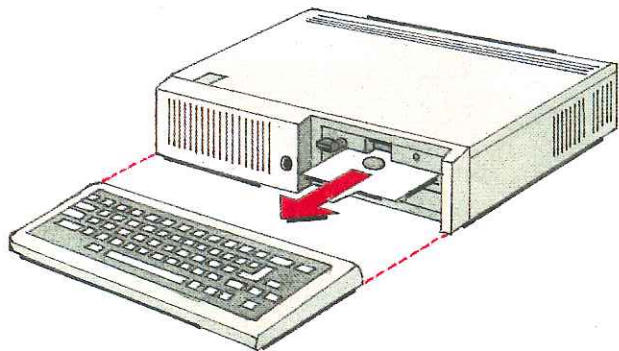


6

Make sure that the power switch on the back of the system unit is in the OFF position.

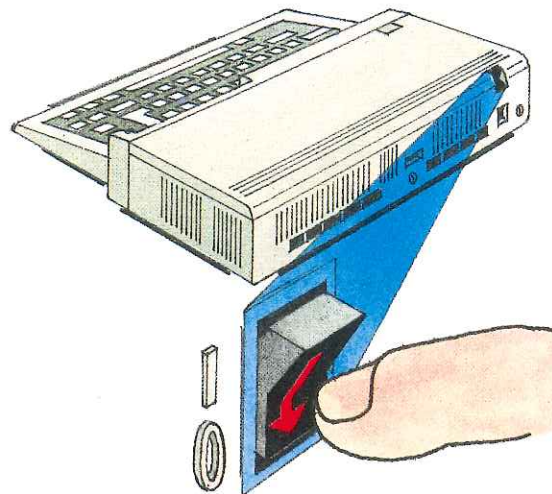


7

Plug the power cord into the opening marked "P" on the back of the system unit.

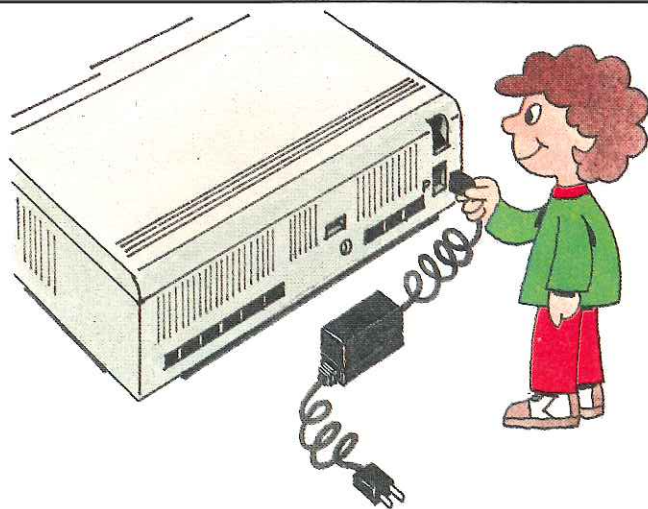


8

Now you're ready to set up your display. Go to the Setup section in your *Guide to Operations* manual, fold and insert these instructions there.

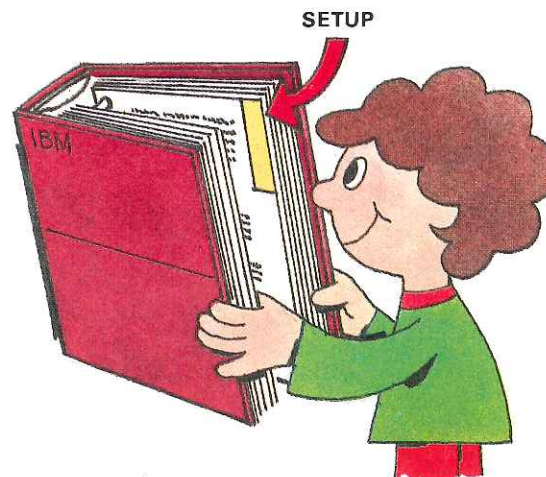

Installation

Install your display or television now, using the instructions that come with your IBM Color Display or IBM Connector for Television. Then return here.

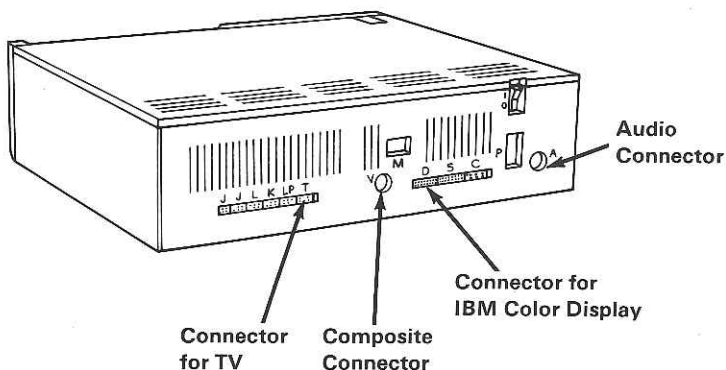

When your display or television is installed, continue with Section 2, "Getting Started."

Note: Diskette errors may be caused if your display is within 17 centimeters (6 inches) of your IBM PCjr. This problem is easily cured by moving your display away from the IBM PCjr.

Notes:

