

# Running the IBM PCjr Tests

You have been directed here from "First Things First". At this point some of the basic IBM PCjr hardware has been tested. You are now ready to test the rest of your IBM PCjr system.

- 1 Turn your IBM PCjr power off.
- 2 Turn your IBM PCjr power on. After the IBM Color Bar screen appears, the IBM Personal Computer BASIC message screen appears.

The IBM Personal Computer Basic  
Version C1.20 Copyright IBM Corp.1981  
XXXXX Bytes free  
OK  
—


1 [LIST] 2 [RUN] 3 [LOAD] 4 [SAVE] 5 [CONT]

**Important:** The next screen that appears will appear only briefly, so you need to know what to look for before we continue. The screen that will appear is called the IBM Color Bar screen. When it does appear, your IBM PCjr begins to test itself. While this test takes place, the amount of memory being tested appears in the lower right-hand corner. It will start with 4KB and end with either 64KB or 128KB, depending on the amount of memory installed. Make a note of the final memory message when it appears. Go to Step 3.

Testing


3

To start running the tests, press and hold

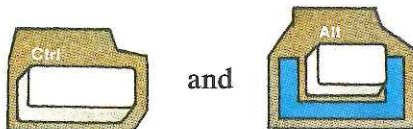

Release all three keys.

Does the IBM Color Bar screen appear?

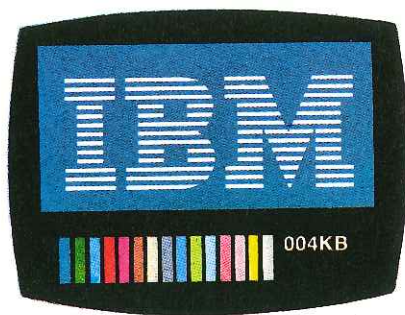

YES - Go to Step 6.


NO - Go to Step 4.

Are you using the IBM PCjr Keyboard Cord to connect your IBM PCjr Keyboard to your IBM PCjr?

**YES -** Check the Connectors on the IBM PCjr Keyboard Cord to be sure that they are not bent or broken, also make sure that the connectors are pushed all the way into the IBM PCjr, and keyboard. Go to Step 5.

**NO -** Check your IBM PCjr Keyboard to be sure that the batteries are good, and that the Keyboard is positioned within 6,1 meters (20 feet) of your IBM PCjr. Make sure nothing is blocking the beam between the keyboard and the front of the IBM PCjr. Go to Step 5.

Try again to start running tests, press and hold

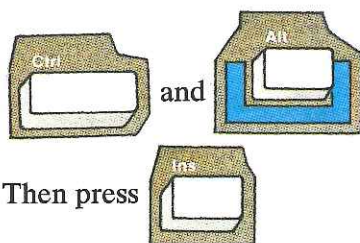

Then press

Release all three keys.

Does the IBM Color Bar screen appear?


**YES -** Go to Step 6.

**NO -** Have your IBM PCjr serviced. See "Service Information" in this section.


- 6** Did the memory message end with 64KB?
- YES -** Go to Step 7.
- NO -** Go to Step 8.
- 7** Do you have the 64KB memory and display expansion option installed?
- YES -** Have your IBM PCjr serviced. See "Service Information" in this section.
- NO -** Go to Step 10.
- 8** Did the memory message end with 128KB?
- YES -** Go to Step 9.
- NO -** Have your IBM PCjr serviced. See "Service Information" in this section.
- 9** Do you have the 64KB memory and display expansion option installed?
- YES -** Go to Step 10.
- NO -** Have your IBM PCjr serviced. See "Service Information" in this section.

After the IBM Color Bar screen displays the amount of memory installed, the first of two IBM PCjr Test Menu Screens appears.

The First IBM PCjr Test Menu Screen looks like this:

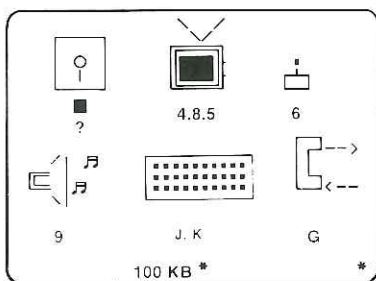

The Second IBM PCjr Test Menu Screen looks like this:

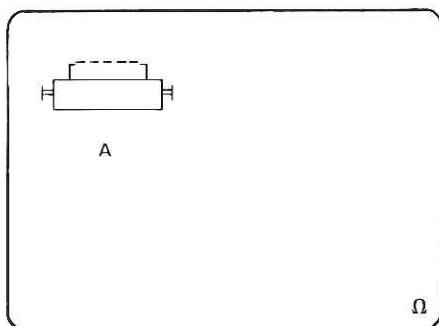

Notice that there is a character under each figure. These characters are called Test Tags. Test Tags are used to select the individual test you wish to run.

When the First IBM PCjr Test Menu Screen appears the blinking cursor is located on Test Tag 1.

You may move the cursor to any of the Test Tags by pressing the Ins key until the cursor is positioned on the Test Tag you wish to use.

When you have moved the cursor to Test Tag G on the First IBM PCjr Test Menu Screen and press the Ins key, the Second IBM PCjr Test Menu Screen appears. The cursor will be on Test Tag A.

To return to the First IBM PCjr Test Menu Screen, press the Ins key. The First IBM PCjr Test Menu Screen appears and the cursor is on Test Tag 1.

To start any test:

- Position the cursor on the Test Tag you want.
- Press the Enter key.
- Go to the documentation in this section that describes the test you have chosen to run.

**Note:** If you are going to run the Modem Test, disconnect your modem from the telephone jack, before pressing enter.

**Note:** If you are going to run the Sound Test, read the first page of "Test Tag 9 - Sound Test" in this Section, before pressing enter.

For example:

- Move the cursor to Test Tag G.
- Before Pressing Enter, disconnect your modem from your telephone jack.
- Press the Enter key.
- Go to "Test Tag G - IBM PCjr Internal Modem Test" found in this section.



## FIRST IBM PCjr TEST MENU SCREEN

| Test Tag | Name                          |
|----------|-------------------------------|
| 1        | Diskette Drive Test           |
| 4        | TV and 40 Column Display Test |
| 8        | 80 Column Display Test        |
| 5        | Light Pen Test                |
| 6        | Attachable Joystick Test      |
| 9        | Sound Test                    |
| J        | Keyboard Test                 |
| K        | Reserved for future use       |
| G        | Modem Test                    |

## SECOND IBM PCjr TEST MENU SCREEN

| Test Tag | Name                  |
|----------|-----------------------|
| A        | Graphics Printer Test |

## BLINKING TEST TAGS

The following Test Tags should always be blinking:

4,5,6,9 and J.

If any of them are not blinking, have your IBM PCjr serviced. See "Service Information" in this section.

The following is a list of the options that can be added to your IBM PCjr. If the option is installed, the Test Tag will be blinking. If the option is not installed, the Test Tag will not be blinking.

| <b>TAG</b> | <b>WILL BE PRESENT AND BLINK WHEN</b> |
|------------|---------------------------------------|
|------------|---------------------------------------|

|          |   |
|----------|---|
| <b>1</b> | A diskette drive is installed in your IBM PCjr. |
|----------|---|

|          |  |
|----------|--|
| <b>8</b> | A 64KB Memory and Display Expansion Adapter is installed in your IBM PCjr. |
|----------|--|

|          |   |
|----------|---|
| <b>A</b> | A Parallel Printer Attachment is attached to your IBM PCjr. |
|----------|---|

|          |   |
|----------|---|
| <b>G</b> | An IBM PCjr Internal Modem is installed in your IBM PCjr. |
|----------|---|

Go to Step 11.

11

Are all of the Test Tags present and blinking for the options you have installed?

**YES -** Go to Step 18.

**NO -** Go to Step 12.

12

Select the item that is not blinking and follow the instructions in the table below.

| Number | Tests                    | Action   |
|--------|--------------------------|--|
| 1      | Diskette Drive           | Go to Step 13.   |
| 4      | TV and 40 Column Display | Have your PCjr serviced.<br><br>See "Service Information" in this section. |
| J      | Keyboard                 |  |
| 5      | Light Pen                |  |
| 6      | Attachable Joystick      |  |
| 9      | Sound                    |  |
| 8      | 80 Column Display        | Go to Step 14.   |
| A      | Parallel Printer         | Go to Step 15.   |
| G      | Modem                    | Go to Step 16.   |

**13**

**Is your diskette drive installed?**

**YES -** Have your IBM PCjr serviced. See "Service Information" in this section.

**NO -** The diskette drive must be installed for Test Tag 1 to blink. Go to Step 11.

**14**

**Do you have the 64KB Memory and Display Expansion option installed in your IBM PCjr?**

**YES -** Have your IBM PCjr serviced. See "Service Information" in this section.

**NO -** The 64KB Memory and Display Expansion option must be installed for Test Tag 8 to blink. Go to Step 11.

**15**

**Is your Parallel Printer Attachment installed?**

**YES -** Have your IBM PCjr serviced. See "Service Information" in this section.

**NO -** The Parallel Printer Attachment must be installed for Test Tag A to blink. Go to Step 11.

**16**

**Is your IBM PCjr Internal Modem installed?**

**YES -** Have your IBM PCjr serviced. See "Service Information" in this section.

**NO -** The IBM PCjr Internal Modem must be installed for Test Tag G to blink. Go to Step 11.

17

Is any Test Tag blinking which should not be?

**YES -** Have your IBM PCjr serviced. See "Service Information" in this section.

**NO -** Go to Step 18.

18

Move the cursor to the Test Tag for the test you want to run. Press the Enter key. Go to the documentation in this Section that describes the test you have chosen to run.

**Notes:**



# Service Information

If part of your IBM PCjr has a problem and must be serviced, do the following:

- 1** Turn your IBM PCjr and all attachments power off.
- 2** Unplug your IBM PCjr power cord from the wall outlet.
- 3** Have the failing unit serviced. If you have been directed to have your IBM PCjr serviced, don't forget that the power cord, keyboard, and all side attached options are considered part of the IBM PCjr, so you need to keep them with the system unit. You should keep any cartridges or diskettes with the IBM PCjr that were being used when the failure occurred.
- 4** Bring the failing unit to your place of purchase for service. Call your place of purchase for specific instructions before bringing in your failing unit.

**Notes:**