


Test Tag 6 - IBM PCjr Attachable Joystick Test

You must have an attachable Joystick installed to run this test.

If, while running the IBM PCjr Attachable Joystick Test you wish to discontinue the test and return to the First IBM PCjr Test Menu Screen, press Fn then press Break.

Remember, because television and display colors vary, the colors in this book may not match the colors on the screen.


- 1 Do the shapes of the blocks and lines on the screen match the shapes of the blocks and lines in the figure below? (You will have a "*" in one or both of the large boxes.)

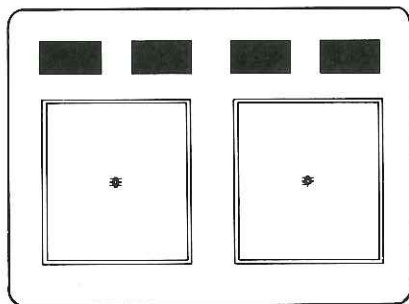

YES - Go to Step 2.

NO - Go to Step 4.

This screen represents the Joysticks connected to your IBM PCjr. The two blocks and box on the left of the screen represent the Joystick you have connected to the right connector (viewed from the rear of the system unit). The two blocks and box on the right of your screen represent the Joystick you have connected to the left connector.

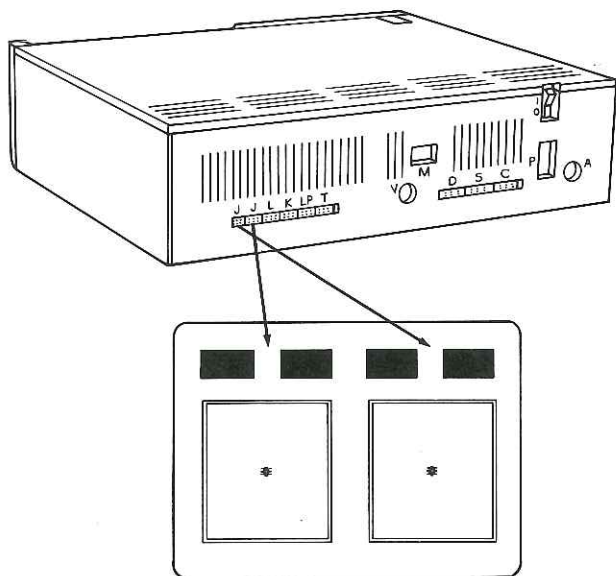

If you have a Joystick connected to the rear of your IBM PCjr, an "*" will appear in the box representing the connector used.

The "*" should be in the center of the box. If it is not, use the centering adjustment levers to center the "*". See the "Centering Adjustment Procedure" in the Attachable Joystick option instructions in Section 5.

The two blocks on the top of the screen represent the buttons on your Joysticks.

Go to Step 3.



Press each button on your Joystick, one at a time.

Each block on the top of your screen gets smaller, as if it has been pressed.

The "*" inside each box can be moved by moving the control stick. Move each "*" to the top of its box and around the inside of its box.

Did your Joysticks work correctly?

YES - Press  then press

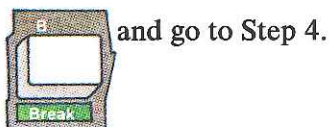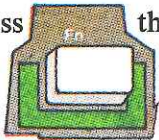

and go to Step 4.

NO - Have your IBM PC_{jr} and your Joysticks serviced. See "Service Information" in this section.

The First IBM PCjr Test Menu Screen appears with a message under Test Tag "6". The message on the left gives the results of the Joystick Test for the Joystick you have connected to the right connector (viewed from the rear of the system unit). The message on the right gives the result of the Joystick Test for the Joystick you have connected to the left connector. The meaning of these messages is shown below:

- * You have completed the Attachable Joystick Test. Go to Step 5.
- A There is no Joystick in that connector. If you do have a Joystick connected there, make sure it is connected properly. If it is, have your IBM PCjr and your Joystick serviced. See "Service Information" in this section.
- B Have your Joystick serviced. See "Service Information" in this section.
- C Have your IBM PCjr serviced. See "Service Information" in this section.

Do you want to run another test?

- YES -** Go to "Running the IBM PCjr Tests" in this section.
- NO -** If you have a diskette drive installed, you may run the "Exploring the IBM PCjr" diskette at this time. If you have run the "Exploring the IBM PCjr" diskette before, you may continue normal operations.

Test Tag 9 - Sound Test

If, while running the Sound Test, you wish to discontinue the test and return to the First IBM PCjr Test Menu Screen, press Fn, then press Break.

The Sound Test has 6 parts.

Part 1 tests the speaker in your IBM PCjr. You hear one beep. You may also hear the beep from your television, display, or external sound system. After this part of the Sound Test is complete, a speaker with a flashing "9" underneath it appears on the screen.


1 Did you hear Part 1 of the Sound Test?

YES - Go to Step 2.

NO - Have your IBM PCjr serviced. See "Service Information" in this section.

Part 2 starts as a low-pitched sound from your speaker. The sound's pitch increases smoothly until it reaches a peak, stays steady for a second and then diminishes until the sound is gone. After this part of the Sound Test is complete, a second speaker with a flashing "9" underneath it appears on the screen.

Press

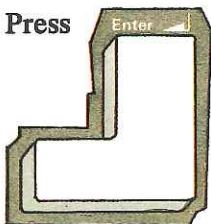


Did you hear Part 2 of the Sound Test?

YES - Go to Step 3.

NO - Go to Step 7.

Part 3 sounds the same as Part 2. It starts as a low-pitched sound from your speaker. The sound's pitch increases smoothly until it reaches a peak, stays steady for a second and then diminishes until the sound is gone. After this part of the Sound Test is complete, a third speaker with a flashing "9" underneath it appears on the screen.

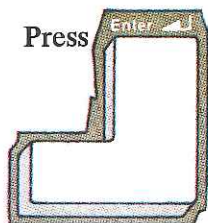


Did you hear Part 3 of the Sound Test?

YES - Go to Step 4.

NO - Go to Step 7.

Part 4 sounds the same as Part 2. It starts as a low-pitched sound from your speaker. The sound's pitch increases smoothly until it reaches a peak, stays steady for a second and then diminishes until the sound is gone. After this part of the Sound Test is complete, a fourth speaker with a flashing "9" underneath it appears on the screen.

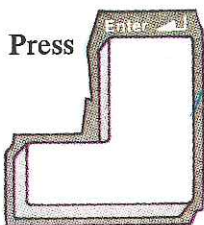


Did you hear Part 4 of the Sound Test?

YES - Go to Step 5.

NO - Go to Step 7.

Part 5 sounds like a motorcycle gradually gaining speed, remaining at that speed (pitch) for a second, and then fading away. After this part of the Sound Test is complete, a fifth speaker with a flashing "9" underneath it appears on the screen.

Press

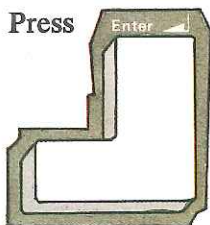

Did you hear Part 5 of the Sound Test?


YES - Go to Step 6.

NO - Go to Step 7.

6

Part 6 is a burst of sound that sounds like a television turned to a blank channel. After this part of the Sound Test is complete, the First IBM PCjr Test Menu Screen appears.

Press

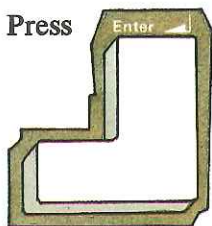

Did you hear Part 6 of the Sound Test?

YES - Go to Step 12.

NO - Go to Step 7.

7

If you are using a television go to Step 8.

If you are using an IBM PCjr Color Display, check it using the "IBM PCjr Color Display Check Out Procedure." This is found in the "IBM PCjr Color Display Installation and Operating Instructions" in Section 5, "The IBM PCjr Options." If you find that your IBM PCjr Color Display is working correctly, have your IBM PCjr serviced. See "Service Information" in this section.

If you are using a display without an external sound system connected to the rear of your IBM PCjr, go to Step 10.

8

Is the volume control adjusted to a mid-volume range?

YES - Go to Step 9.

NO - Adjust the volume and return to "Running the IBM PC_{jr} Tests " in this section and select this test again.

9

Disconnect your television from your IBM PC_{jr} and check the sound on your television.

Is the sound on your television working properly?

YES - Have your IBM PC_{jr} and IBM Connector for Television serviced. See "Service Information" in this section.

NO - You can use your IBM PC_{jr} without sound. If you want to hear Parts 2 through 6 of the Sound Test you will have to connect your IBM PC_{jr} to a working television. Go to Step 13.

10

If you are using a display without an external sound system, Parts 2 through 6 of the Sound Test will not be heard. If you want to hear parts 2 through 6 of the Sound Test, you will have to connect an external sound system to the rear of your IBM PCjr. You can use your IBM PCjr with a display without an external sound system connected. Go to Step 13.

11

Connect your external sound system to another sound output device to determine if it is working properly.

Is your external sound system working properly?

YES - Have your IBM PCjr serviced. See "Service Information" in this section.

NO - Connect a working external sound system to your IBM PCjr and return to "Running the IBM PCjr Tests" in this section, and select this test again.

A message appears underneath Test Tag "9" for Sound. The meaning of the message is shown below:

- * You have completed the Sound Test. Go to Step 13.
- ? You have interrupted the Sound Test before it was completed by pressing Fn and then pressing Break. If you wish to complete the Sound Test, return to "Running the IBM PCjr Tests" in this section, and select this test again.

Do you want to run another test?

- YES - Go to the "Running the IBM PCjr Tests" in this section.
- NO - If you have a diskette drive installed, you may run the "Exploring the IBM PCjr" diskette at this time. If you have run the "Exploring the IBM PCjr" diskette before, you may continue normal operations.


Notes:

Test Tag J - IBM PCjr Keyboard Test

If, while running the IBM PCjr Keyboard Test, you wish to discontinue the test and return to the First IBM PCjr Test Menu Screen, press Fn, then press Break. Press Fn, then press Break again.

Remember, because television and display colors vary, the colors in this book may not match the colors on the screen.

- 1 Does the screen match the example below?

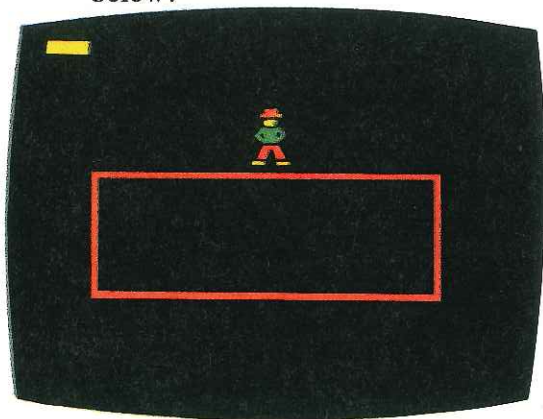

YES - Go to Step 2.

NO - Have your IBM PCjr serviced. See "Service Information" in this section.

Press the keys you wish to test. As you do, the character for each key you pressed appears at the top of the screen.

Are all the characters for the last keys you pressed displayed at the top of the screen?




YES - Go to Step 3.

NO - Have your IBM PCjr serviced. See "Service Information" in this section.

3


Press

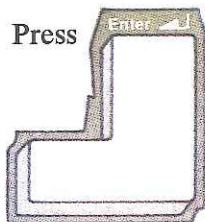


Press and hold the J key. The "J" appears at the top of the screen and continues to repeat while you press it.

Did the "J" continue to repeat while you pressed the J key?

YES - Press

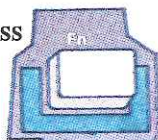

Then press

 

Note: You may need to press the Fn and Break keys a second time.

Go to Step 4.

NO - Have your IBM PCjr serviced. See "Service Information" in this section.

The First IBM PCjr Test Menu Screen appears with a message under Test Tag "J". The meaning of this message is shown below:

* Your IBM PCjr and keyboard are working properly. (If you have done this test without the optional IBM PCjr Keyboard Cord and you have the optional IBM PCjr Keyboard Cord, go to step 5.)

B If you are using a cord with your IBM PCjr keyboard, have your IBM PCjr serviced. Refer to "Service Information" in this section.

If you are not using a cord with your IBM PCjr keyboard, this error can be caused by one of the following:

- Direct Sunlight
- Bright florescent light
- Keyboard not lined up with the IBM PCjr
- Keyboard batteries are low or bad

If one or more of these conditions exist, correct the condition and return to "Running the IBM PCjr Tests" in this Section and select this test again. If none of these

conditions exist, have your IBM PCjr serviced. See "Service Information" in this section.

5

The following steps are for the optional IBM PCjr Keyboard Cord only. If you do not want to run the Keyboard Test with a keyboard cord, go to Step 10.

Turn your IBM PCjr power off. Go to Step 6.

6


Connect the end of your IBM PCjr Keyboard Cord marked "K" to the connector marked "K" on the rear of your IBM PCjr. Connect the other end of your IBM PCjr Keyboard Cord to your IBM PCjr Keyboard.

7

Turn your IBM PCjr power on.

8

When the IBM Personal Computer BASIC Message Screen appears, press and hold

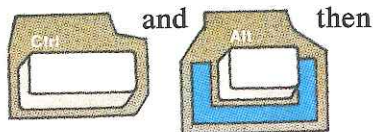

9

The First IBM PCjr Test Menu Screen appears. Select Test Tag J and press Enter. Return to IBM PCjr Keyboard Step 1.

Do you want to run another IBM PCjr test?

- YES -** Go to "Running the IBM PCjr Tests" in this section.
- NO -** If you have a diskette drive installed, you may run the "Exploring the IBM PCjr" diskette at this time. If you have run the "Exploring the IBM PCjr" diskette before, you may continue normal operations.

Notes: