


Opening the DA

It is a good idea to spend a few moments getting familiar with the menus, windows, and function keys in the DA before you start using it.

Open the DA by typing `DA` or pressing `Alt-A` if the DA is memory-resident. The Chooser window appears.

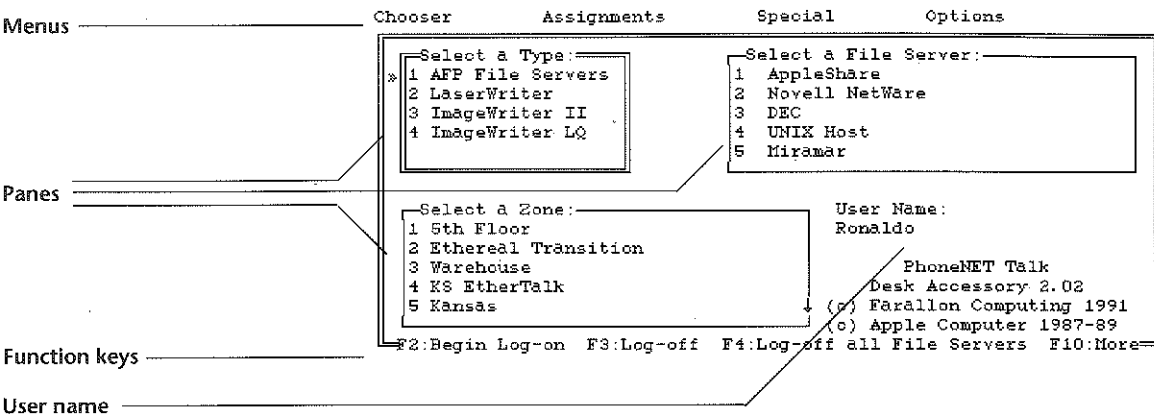

The Chooser window is the first of many screens. Each screen shares some characteristics:

- **Menu:** The menus represent the four main DA functions: Chooser, Assignments, Special, and Options. Press the left and right arrow keys to display each menu.
- **Panes:** The panes contain user-selectable options. A pane is highlighted when a border appears around it. You can move to a different pane by pressing the `Enter` or `Tab` key. You can choose individual entries in a pane using the up and down arrows or by typing the number or letter preceding the entry.
- **Function keys:** The available function keys are listed at the bottom of the screen. When available, pressing `F10` displays additional function keys.

- **User name:** This name identifies your device on the AppleTalk network. See the next section to change your user name.
- **Help text:** You can display help for many of the DA screens by pressing F1.
- **Hierarchy of screens:** Pressing certain function keys takes you to additional screens. Pressing Escape takes you back to the previous level.
- **Exiting:** The Escape key displays the previous screen. Control-C exits the DA and returns to DOS or the previous application.
- **Navigation keys:** HOME goes to the first item shown in the active pane; END goes to the last item shown. PGDN displays the next group of items; PGUP displays the previous group of items. CTRL-HOME selects the first item in the scrolling list; CTRL-END selects the last item.

Changing the user name

The user name identifies your device on the AppleTalk network. When you install PhoneNET Talk software, your computer is assigned the user name "Unknown." Check with your network administrator before you change the user name because one may have already been assigned for you.

1. Open the DA.
2. Press F5 to highlight the User Name field and press Ctrl-Backspace to delete the current name.
3. Type in the new user name. The name can be up to 31 characters long and can include numbers, symbols, and blanks.
4. Press Enter to record the new user name. A message appears briefly while the new name is registered.

To change the user name:

Attaching AFP file server volumes

Before you can attach a file server volume, you may need to check with the network administrator to determine the zone where the AFP file server resides on the network, your user name and password, and which volumes you have access privileges for.

To attach a file server volume:

1. Open the DA.
2. Select AFP File Servers in the Type pane and press Enter.
3. Select a zone. You may have to scroll to locate the zone you want. When you select a different zone, the server names in the File Server pane change. Press Enter when you have selected the zone containing the file server you want.
4. Select a file server.

Chooser	Assignments	Special	Options
-Select a Type: 1 AFP File Servers 2 LaserWriter 3 ImageWriter II 4 ImageWriter LQ		-Select a File Server: 1 AppleShare 2 Novell NetWare 3 DEC 4 UNIX Host 5 Miramar	
	-Select a Zone: 1 5th Floor 2 Ethereal Transition 3 Warehouse 4 KS EtherTalk 5 Kansas		User Name: Ronaldo PhoneNET Talk Desk Accessory 2.02 (c) Farallon Computing 1991 (c) Apple Computer 1987-89
F2:Begin Log-on F3:Log-off F4:Log-off all File Servers F10:More			

5. Press F2 to display the Log On window.

LOGON: Connect to server AppleShare in zone Ethereal World
Logon as: Guest Registered User
User Name: Ron Schmidt
»Password: *****
F2:Log-on

6. Use the left/right arrow keys to select Guest or Registered User and press Enter.


If you selected Guest, press F2 to log onto the server. If the server allows guest logons, the Connect window will be displayed. Skip to step #9.

To connect to the server as a registered user, type or correct your user name if necessary and press Enter. PhoneNET Talk automatically inserts the name you previously used during this session if applicable.

7. Type in your password. You will not see the characters displayed on the screen as you type. AFP file server passwords are case-sensitive.

The password field does not appear if you previously entered a password during this session.

8. Press F2. If the server recognizes your user name and password, the Connect window will be displayed.

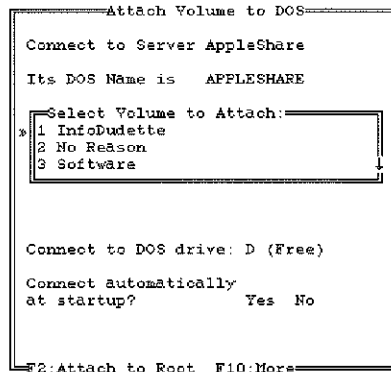

The Connect window

If the server doesn't recognize your user name or password, an error message appears. Press any key to continue; then try again. If you are unable to log on, check with your network administrator.

9. Select the name of the file server volume you want to attach and press Enter. You may have to scroll down to locate the volume you want.
10. Verify the drive shown in the DOS Drive field. PhoneNET Talk automatically assigns a drive if one is available. On a PC with a hard disk and two floppy drives, usually drive "D" or "E" appears in the field. If a drive appears in this field with the word "Free" next to it, press Enter and skip to step 11.

A blank DOS drive field indicates that all drives have been assigned. You can reassign a drive by typing a letter and pressing Enter. You can even assign a floppy drive, although keep in mind that the floppy drive will be unavailable until you detach the drive.

- ▶ Hint: By default, six letters are available for assigning drives. You can make more than six drives available by changing the DOS LASTDRIVE statement in your CONFIG.SYS file. See your DOS manual.
11. Decide whether or not you would like to automatically attach the drive specified when the network startup batch file loads. This is convenient if you frequently access the same server volume.
 - Choose No to ignore automatic drive attachment. Press Enter and skip to the next step.
 - Choose Yes to use automatic drive attachment. This is a good choice if you access the server volume frequently. An additional field appears, asking you whether or not to save passwords.

If you select No on Save Passwords, you will be asked to type in your password when the network startup batch file runs. This is the recommended choice.

If you select Yes on Save Passwords, PhoneNET Talk automatically enters your password and attaches the specified volume when you set up. Choose Yes only if security to volumes is open or you have exclusive access to this PC.

12. To attach the drive to the root directory of the file server volume, press F2. Continue to step 13.

To attach the drive to a subdirectory, press F3. Use the up/down arrow keys to select a subdirectory and press F2 to attach the subdirectory.

```

\\APPLESHARE\!InfoDud.ett
.
MYLETTER.DOC  MYLETTER.DOC
Brett         Brett
!HyperCa.rd  HyperCard utilities
!Mail_Pr.ogr Mail Programs
!MarCom.Cop  MarCom Copy/Layouts
!MarCom.Ord  MarCom Ordering
!MarComm.Ar  MarComm Art
F2:Attach to Directory

```

The Attach Subdirectory window

13. Once you have attached the drive to the root directory or subdirectory, the Connect window is redisplayed. You can attach additional drives or exit. Press Escape to return to the Chooser window, or Control-C to exit.

To detach a file server volume:

1. Go to the Assignments menu, select an AFP file server volume, and press F3. A confirmation appears.
2. Press Enter to detach the volume.

To log off a file server:

1. Go to the Special menu and select List All Connections. Select a session and press F3 to log off. A confirmation appears.
2. Press Enter to log off.

Attaching a network printer

Use the DA to attach printer ports to network printers. You can then use your applications to print to most AppleTalk printers, including an AppleTalk PostScript printer such as an Apple LaserWriter and an AppleTalk ImageWriter.


To attach a PostScript printer:

1. Open the DA by typing `DA` at the `C:` prompt.
2. In the Type pane, select the LaserWriter printer type and press Enter. Select this option to print to AppleTalk PostScript printers.
3. Select the zone that contains the printer you want to use and press Enter. As you select different zones, the printer names in the LaserWriter pane change.
4. Select the printer.

Chooser	Assignments	Special	Options
Select a Type: 1 AFP File Servers 2 LaserWriter 3 ImageWriter II 4 ImageWriter LQ		Select a LaserWriter: 1 5th Floor North 2 Mktg LaserWriter NFX	
Select a Zone: 1 5th Floor 2 Ethereal Transition 3 Warehouse 4 KS EtherTalk 5 Kansas		User Name: Ronaldo	PhoneNET Talk Desk Accessory 2.02 (c) Farallon Computing 1991 (c) Apple Computer 1987-89

F2:Connect F3:Disconnect F10:More

5. Press F2 to display the Connect window.
6. Choose your application output and press Enter. The default output is Epson. If your application supports only Epson printers, select Epson. If your application supports PostScript, choose PostScript.

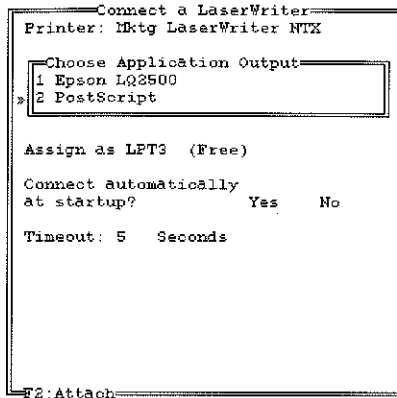

The Connect window

7. Verify the drive shown in the Assign field. The DA automatically assigns a printer port if one is available. If the number assigned is acceptable to you, press Enter and skip to step 8.

You can change the printer port if desired, or reassign a printer port.

- You must choose a printer port between 1 and 3.
- Some applications print to the device PRN. To connect a printer to the designator PRN, choose LPT1.
- If the printer port you use is attached to a local printer or parallel port, that printer or port will be unavailable until you detach the network printer assignment.

After you have entered a printer port, press Enter.


8. Select Yes or No to connect to this printer automatically at startup time and press Enter. You should select Yes if you use this printer frequently.

If you selected Epson as the application output, check the default margin, page size, lines per inch, character per inch, and tab settings.

9. Check the time-out setting. Time-out sets the number of seconds the driver waits for a printer command before it sends an end-of-document command. Generally, you won't change this setting unless the network administrator advises you to do so.
10. Press F2 to attach the printer port to the network printer. You're now ready to print.

To attach an AppleTalk ImageWriter printer:

1. Start the DA by typing DA at the C: prompt.
2. In the Type pane, select the ImageWriter II or ImageWriter LQ printer type.
3. Select the zone that contains the printer you want to use and press Enter. As you select different zones, the printer names in the ImageWriter pane change.
4. Select the printer and press F2 to display the Connect window.

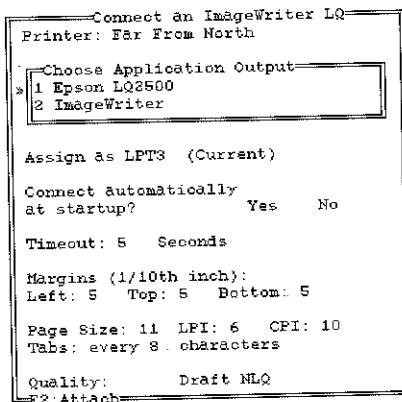

5. Choose your application output and press Enter. If your application supports an ImageWriter, choose ImageWriter. If your application supports Epson printers, choose Epson.

6. Verify the drive shown in the Assign As field. The DA automatically assigns a printer port if one is available. If the number assigned is acceptable to you, press Enter and skip to step 7.

You can change the printer port if desired, or reassign a new printer port.

- You must choose a printer port between 1 and 3.
- Some applications print to the device PRN. To connect a printer to the designator PRN, choose LPT1.
- If the printer port you use is attached to a local printer or parallel port, that printer or port will be unavailable until you detach the network printer assignment.

After you have entered a printer port, press Enter.

7. Select Yes or No to connect to this printer automatically at startup time and press Enter. You should select Yes if you use this printer frequently.

If you selected Epson as the application output, check the default margin, page size, lines per inch, characters per inch, and tab settings. Choose either the Draft mode or NLQ (Near Letter Quality) mode.

8. Check the time-out setting. Time-out sets the number of seconds the driver waits for a printer command before it sends an end-of-document command. Generally, you won't change this setting unless the network administrator advises you to do so.
9. Press F2 to attach the printer port to the network printer. You're now ready to print.

To detach a network printer:

Go to the Special menu and select List All Connections. Select a network printer and press F3 to disconnect the printer.

Accessing files and directories on an AFP file server volume

Once you have attached a drive to an AFP file server volume, you can use the DA to browse through the volume and see the files and directories. This section describes how to delete, rename, and copy files and directories, create a directory, and set the current directory.

It's a good idea to spend a few moments browsing through an AFP file volume and making a note of the function keys available before you select files and take action.

To browse through an AFP file server volume:

1. Select the Assignments menu. All attached AFP file server volumes will be listed.

```

Assignments
> A Removable
  B Removable
  C Fixed ( )
  D AFP (\\APPLESHARE\SOFTWARE)
  E AFP (\\APPLESHARE\!PEOPLE.J-R\!RON)
  F7:Set Current Drive
  
```

Select the AFP file server volume you would like using the up/down arrow keys. Press Enter to see the directories in it.

To see the contents of any subdirectory, select it with the arrow keys and press Enter. To go up a directory level, select the directory labeled with two periods (..) and press Enter. Some directory names appear dimmed, meaning that you do not have access privileges.

```

E:\
  DASCN          2050 12-16-90  2:12 PM A
  DIANACWN       45760 11-07-90  2:26 PM A
  FINDME.BAK     2048  1-08-91  1:09 PM A
  FINDME.DOC     2560  1-08-91  1:12 PM A
  INTRO          2050  1-04-91  6:22 PM A
  INTRO1         2050  1-04-91  6:23 PM A
  INTRO2         2050  1-04-91  6:23 PM A
  INTRO3         2050  1-04-91  6:25 PM A

  21339K free, 289863K total

  F2:Info  F3:Delete  F4:Rename  F5:Copy  F10:More
  
```

2. Once you have located a file or directory, you can select from one of the function keys.
 - F1** Help: Displays a window with help text
 - F2** Info: Displays AFP information.
 - F3** Delete: Deletes a file or directory.
 - F4** Rename: Renames a file or directory.
 - F5** Copy: Copies a file or directory. You can select from three conversion options to convert Macintosh ASCII to DOS ASCII and vice versa.
 - F6** Create Directory: Create a new directory.
 - F7** Set Current Directory: Sets the selected directory to the current directory.
 - F8** Privileges: Shows the access privileges for a directory. If you are the owner of the directory, you can change the access privileges.
 - F9** Long/Short Names: Displays either the Macintosh filename (up to 31 characters) or the file creation date and time.
 - F10** More: Displays additional function keys.

To delete a file:

Select an AFP file server volume in the Assignments menu, browse to select a file, and press F3. A confirmation window appears. Press Enter to confirm the delete, or Escape to cancel.

Note: Only files that you have access privileges for and are not marked "Read Only" will be deleted.

To delete a directory:

1. Select an AFP file server volume in the Assignments menu, browse to select a directory and press F3. A confirmation window appears. If the directory does not contain any files, press Enter to complete the deletion. Otherwise, continue to the next step.

```

Delete a Directory
Directory: E:\!PhoneNE.T_T
File Specification: *.*
Delete Subdirectories? Yes No
F2:Start Delete

```

2. Review the File Specification and Delete Subdirectories fields.

You have the option to delete some or all of the files in the directory. The default File Specification setting is *.* , meaning that all files in the directory will be deleted. If desired, change this setting using standard DOS filename conventions. Press Enter.

3. Specify whether or not to delete subdirectories. The default Delete Subdirectories setting is Yes. If desired, use the arrow keys to change the setting.
4. Press F2 to initiate the delete process. An additional confirmation may appear. Press Enter.

A delete status window appears. You can cancel the process by pressing Escape. Once the delete has completed, press any key to continue.

To rename a file or directory:

1. Select an AFP file server volume in the Assignments menu, browse to select a directory or file, and press F4. A name dialog appears.

```

E:\
Enter new name for DANS.PCX:
»NAME: E:\

```

2. Enter the new pathname along with a new directory or filename, and press Enter. The process is complete.

To copy a file:

1. Select an AFP file server volume in the Assignments menu, browse to select a file to copy, and press F5. A destination window appears.

```

E:\
Enter Destination for DA.DTA:
»NAME: E:\

```

2. Enter a destination pathname and filename and press Enter. A conversion window appears.

```

Choose a Conversion:
» 1 NONE
  2 DOS-Text -> Mac-Text
  3 Mac-Text -> DOS-Text

```

3. Select a conversion option and press Enter. Select None (the default option) unless you are converting an ASCII file.

- Select DOS-Text-to-Mac-Text to remove unwanted line feed characters from a DOS ASCII file. If you don't use this option you may have to manually remove line feed characters when you open the file in a Macintosh application.

- Select Mac-Text-to-DOS-Text to insert line feeds in the Macintosh ASCII file. If you don't use this option you may have to manually add line feeds when you open the file in a PC application.
4. Press Enter to initiate the copy. Once the copy has completed, the window showing directories and files will be redisplayed.

Note: The file will not be copied if you do not have the correct access privileges.

To copy a directory:

1. Select an AFP file server volume in the Assignments menu, browse to select a directory, and press F5. The Copy Directory window appears.

```

Copy a Directory
Directory: E:\SAVSC\FILES

Destination:

File Specification: *.*

Choose a Conversion:
1 NONE
2 DOS-Text -> Mac-Text
3 Mac-Text -> DOS-Text

Copy Subdirectories? Yes No
Overwrite existing files? Yes No

F2:Start Copy
  
```

2. Enter a destination pathname and filename and press Enter.
3. Review the File Specification setting. You have the option to copy some or all of the files in the directory. The default File Specification setting is *.* , meaning that all files in the directory will be copied. If desired, change this setting using standard DOS filename conventions. Press Enter.
4. Select a conversion option and press Enter. Select None (the default option) unless you are converting an ASCII file.

- Select DOS-Text-to-Mac-Text to remove unwanted line feed characters from a DOS ASCII file. If you don't use this option you may have to manually remove the line feed characters when you open the file in a Macintosh application.
 - Select Mac-Text-to-DOS-Text to insert line feeds in the Macintosh ASCII file. If you don't use this option you may have to manually add line feeds when you open the file in a PC application.
5. Specify whether or not to copy subdirectories. The default setting is Yes. If desired, use the arrow keys to change the setting. Press Enter.
 6. The Overwrite Existing Files option lets you decide whether or not you would like files on the destination directory overwritten or left intact. The default setting is No. If desired, use the arrow keys to change the setting.
 7. Press F2 to initiate the copy. A copy status window appears. You can cancel the copy process by pressing Escape.

```

E:\SAYSC\FILES
Specification: *.*
Copy complete

Files copied           = 3
Directories copied    = 0
Destination already exists = 0

Source open errors    = 0
Destination create errors = 0
Read errors           = 0
Write errors          = 0
Directory create errors = 0
Press any key to continue

```

Once the directory has been copied, press any key to continue.

Note: You can only copy files if you have the correct access privileges.

To create a directory:

1. Select an AFP file server volume in the Assignments menu, and press F6. A directory name window appear.

```
E:\SAVSC
Enter new Directory name:
NAME:
```

2. Enter a destination pathname and filename and press Enter to create the new directory.

You will be the owner of the new directory and will have privileges to see directories, see files, and make changes.

To set the current directory:

Select an AFP file server volume in the Assignments menu, browse to select a directory, and press F7.

Displaying AFP information and setting access privileges

This section describes how to display AFP file information and set access privileges.

To display AFP information for a file:

1. Select an AFP file server volume in the Assignments menu, browse to select a file, and press F2. The file information window is displayed.

```

E:\
File Name: DANS.PCX
Long Name: DANS.PCX
on Volume: People J-R
on Server: AppleShare

Type: Binary
Size: 24963 Bytes

Created: Mon, Jan 7, 1991 11:12 AM
Modified: Mon, Jan 7, 1991 1:11 PM
Backed up: Never

Read-Only (Locked): Yes No

Comment:

```

F2: Save Changes

2. Review the file, volume, and server name, and the file type, size, and date information.
3. Optionally change the Read-Only status of the file. This is useful if you want to ensure that the file is not accidentally deleted or overwritten.
4. Optionally enter notes in the Comment field.
5. Optionally change the Macintosh file type. You can only change the file type if the existing file type is recognized by PhoneNET Talk software. See "Remapping DOS Filename Extensions" in Chapter 2 for more information.

Press Enter to select the Type field. Use the up/down arrow keys to select a Macintosh file type. Press Enter.

6. Press F2 to save changes.

To display AFP information for a directory:

1. Select an AFP file server volume in the Assignments menu, browse to select a directory, and press F2. The directory information window is displayed.

```

E:\
Dir Name:   PIZAZZ
Long Name:  PIZAZZ
on Volume:  \People J-R
on Server:  AppleShare

Size:       0 file(s)

Created:    Fri, Nov 30, 1990  4:45 PM
Backed up:  Never

Privileges: See Directories, See Files
             Make Changes

Comment:
┌───────────────────────────────────────────────────────────────────────────────────┐
│                                                                               │
│                                                                               │
│                                                                               │
│                                                                               │
│                                                                               │
│                                                                               │
└───────────────────────────────────────────────────────────────────────────────────┘

F2:Save Changes  F8:Privileges
  
```

2. Review the directory, volume, and server name, and the directory size, date, and access privilege information.
3. Optionally enter notes in the Comments field.
4. Press F2 to save changes or F8 to display the access privileges window.

*To set access privileges
for a directory:*

1. Select an AFP file server volume in the Assignments menu, browse to select a directory and press F8.
2. Review the directory and logon name, access privileges, owner, and group.

```

E:\
Name:          PIZAZZ
Logged in as:  Ron Schmidt
Privileges:    See Directories, See Files
               Make Changes

Owner:         Ron Schmidt
Group:

+-----+-----+-----+
| See Directories:  [X] [ ] [ ] |
| See Files:        [X] [ ] [ ] |
| * Make Changes:   [X] [ ] [ ] |
+-----+-----+-----+

Change enclosed directories? Yes No

F2:Toggle Privilege  F3:Save Changes

```

If you are not the owner of this directory, you cannot make any changes to the access privileges. Press Escape to return to the directory window.

If you are the owner of this directory, you can change the owner, group, and access privileges of this directory. Continue with the following steps.

3. Change the owner if desired and press Enter.
 - ▲ **Warning:** If you enter another user's name, you may forfeit your ability to access files in the directory.
4. Change the group if desired and press Enter. The network administrator is responsible for creating groups and assigning individuals to them.
5. Change the access privileges. A brief overview of access privileges follows. Consult your AFP file server documentation or talk with your network administrator for more detailed information about access privileges.

There are three categories of users:

- Owner: The person entered in the Owner field
- Group: The group entered in the Group field
- Everyone: All registered users and guests who have access to the server.

For each user category, there are three levels of privileges:

- See Directories: The privilege to see any folders inside the folder you created
- See Files: The privilege to read or copy any documents or programs in the folder (but not to change any)
- Make Changes: The privilege to modify to any of the folders contents, including deleting items from it.

Use the arrow keys to select an access privilege field. An X indicates that the corresponding privilege is set. Press F2 to toggle the privilege on or off.

Press Enter after you have finished changing the access privileges.

6. Specify whether or not you would like the access privilege changes made to subdirectories.
7. Press F3 to save changes.
8. Press Escape to return to the directory window.

Additional features

The DA includes two menus, the Special menu and Options menu, that contain additional features.

Special

- 1 Disconnect All Devices
- 2 List All Connections
- 3 Review Auto-Connections
- 4 Change Extension Mapping
- 5 About PhoneNET Talk

The Special menu

- **Disconnect All Devices:** Closes all file server sessions and detaches all AFP volumes. A confirmation window appears before the devices are disconnected. Press Enter to confirm.
- **List All Connections:** Shows a list of all open sessions, connected devices, and attached printers. Select a session or printer and press F3 to log off.

Open AppleTalk Connections	
Sessions	Attached to
1 APPLESHARE	D:
2 5th Floor North	LPT3: (Epson)
3 5th Floor North	LPT2: (PostScript)

F3:Log-off Session

- **Review Auto-Connections:** Shows a list of the connections that are automatically established when the network startup batch file loads. Select a connection and press F3 to remove it.

Review Auto-Connections		
Connection	User	Device
1 AppleShare	Ron Schma..	E:
2 5th Floor North		LPT2:
3 5th Floor North		LPT3:

F3:Remove entry

- **Change Extension Mapping:** Lets you configure PhoneNET Talk software to associate a particular DOS filename extension with a Macintosh file type. See the steps below for details. Once configured, when a DOS file with a particular filename extension is copied to an AFP file server, the appropriate Macintosh file type information is added to the file. For more information about extension mapping, see “Remapping DOS Filename Extensions” in Chapter 2.
- **About PhoneNET Talk:** Displays memory and copyright information about PhoneNET Talk software.

To change the extension mapping:

1. Choose Change Extension Mapping and press Enter.
2. Type any valid DOS extension (up to three letters) that you want to map to a particular Macintosh file type and press Enter. If the extension has already been mapped, the Macintosh file type will appear alongside the extension you entered. The default file type is Binary.
3. In the Select Type pane, select the Macintosh file type.
4. Press F2 to save the setting.

```

Change Extension Mappings
xExtension: BML = Excel

Select Type:
3 DOS-Text
4 Excel
5 Word

F2:Set Type
  
```

Options

```

1 [ ] Show hidden files
2 [X] Show status line
3 [X] Verify deletes
4 [X] Fast video
5 [X] Color Monitor
6 Change Colors
7 Change Hot Key

```

The Options menu

- **Show Hidden Files:** Select this option to display the names of files that are normally hidden by DOS. The default setting is off. Press Enter to toggle the setting.
- **Show Status Line:** Select this option to display a status line at the bottom of the screen. This is useful when you learn to use the DA. The default setting is on. Press Enter to toggle the setting.
- **Verify Deletes:** Select this option to confirm file deletions when using the Delete command in the Assignments menu. We recommend that you leave this option on. The default setting is on. Press Enter to toggle the setting.
- **Fast Video:** Select this option when using high-speed video cards. The default value is off. This option will be dimmed if your video card does not support fast video. If you see a distorted image on the screen, switch this option off. Press Enter to toggle the setting.
- **Color Monitor:** Select this option to display the DA screens in monochrome or color. This option will be dimmed if your video card supports only a monochrome monitor. Press Enter to toggle the setting.
- **Change Colors:** Select this option to change the colors in the DA screens. See the steps on the following page for details.
- **Change Hot Key:** Select this option to change the hot key keyboard combination. The default hot key keyboard combination is Alt-A. This option is dimmed if the DA is not memory-resident. See the steps on the following page for details.

To change colors:

1. Select Change Colors from the Options menu. The Color Selection window appears.

Color Selection		
Normal	***	Text ***
Pointer (x)	***	Text ***
Normal Border	***	Text ***
Error Border	***	Text ***
Top Title	***	Text ***
Bottom Title	***	Text ***
N/A Menu choice	***	Text ***
Menu choice	***	Text ***
Edit current	***	Text ***
Edit non-current	***	Text ***
Error Box Title	***	Text ***
Status Line	***	Text ***
Help Border	***	Text ***
Help Title	***	Text ***
F2: Keep New Colors		

2. Press the up/down arrow keys to make a selection. Press the right/left arrow keys to cycle through the available colors.
3. Press F2 to save your new color choices. A window appears asking you if you want to save changes to disk.

Select Yes to save changes to disk. The colors you select will appear every time you open the DA.

Select No to save changes only for the current session.

To change the hot key:

1. Select Change Hot Key from the Options menu. A window asking you to enter the new hot key appears.
2. Press the new hot key.

Chapter 4

Troubleshooting

This chapter identifies and offers solutions for some of the common problems you may encounter when you work with PhoneNET Talk software. If you are unable to solve a problem after reading this section, call Farallon Technical Support at (415) 596-9000.

Loading the PhoneNET Talk stack

Portions of the PhoneNET Talk stack do not load

- The DIP switches on the network adaptor or the settings you specified during the installation of PhoneNET Talk software do not match or are incorrect. Check the manual that came with the network adaptor for the correct settings and reinstall PhoneNET Talk software.
- The AUTOEXEC.BAT file has been modified and no longer contains the commands to load PhoneNET Talk stack. Reinstall the software.
- PhoneNET Talk software has been deleted or moved to a different directory. Move the software back to its original location, change the AUTOEXEC.BAT file so it recognizes the new location, or reinstall the software.